

**A. NATIONAL MOULDING
& ORNAMENT, LTD.**

1500 Shames Drive, Westbury, NY 11590
www.anationalmldg.com

Standard & Custom Mouldings
for Doors, Windows & Walls

Flexible Mouldings • Ceiling Medallions

Custom Mantles & Cabinetry

Ornaments • Carvings

**FREE
ESTIMATES**

516-338-5200

A. NATIONAL MOULDING & ORNAMENT, LTD.

TEL: 516-338-5200 • www.anationalmldg.com

THE ELITE SERIES

MDF ARCHITECTURAL MOULDINGS

Contact Us For
More Information:

516-338-5200
anatmldg@aol.com


**FREE
ESTIMATES**

**A. NATIONAL MOULDING
& ORNAMENT, LTD.**

1500 Shames Drive, Westbury, NY 11590
www.anationalmldg.com


**Long Island's #1
Moulding
Warehouse!**

- Over 500 Profiles in Stock
- FREE Prompt Delivery
- Poplar / MDF / Hardwoods

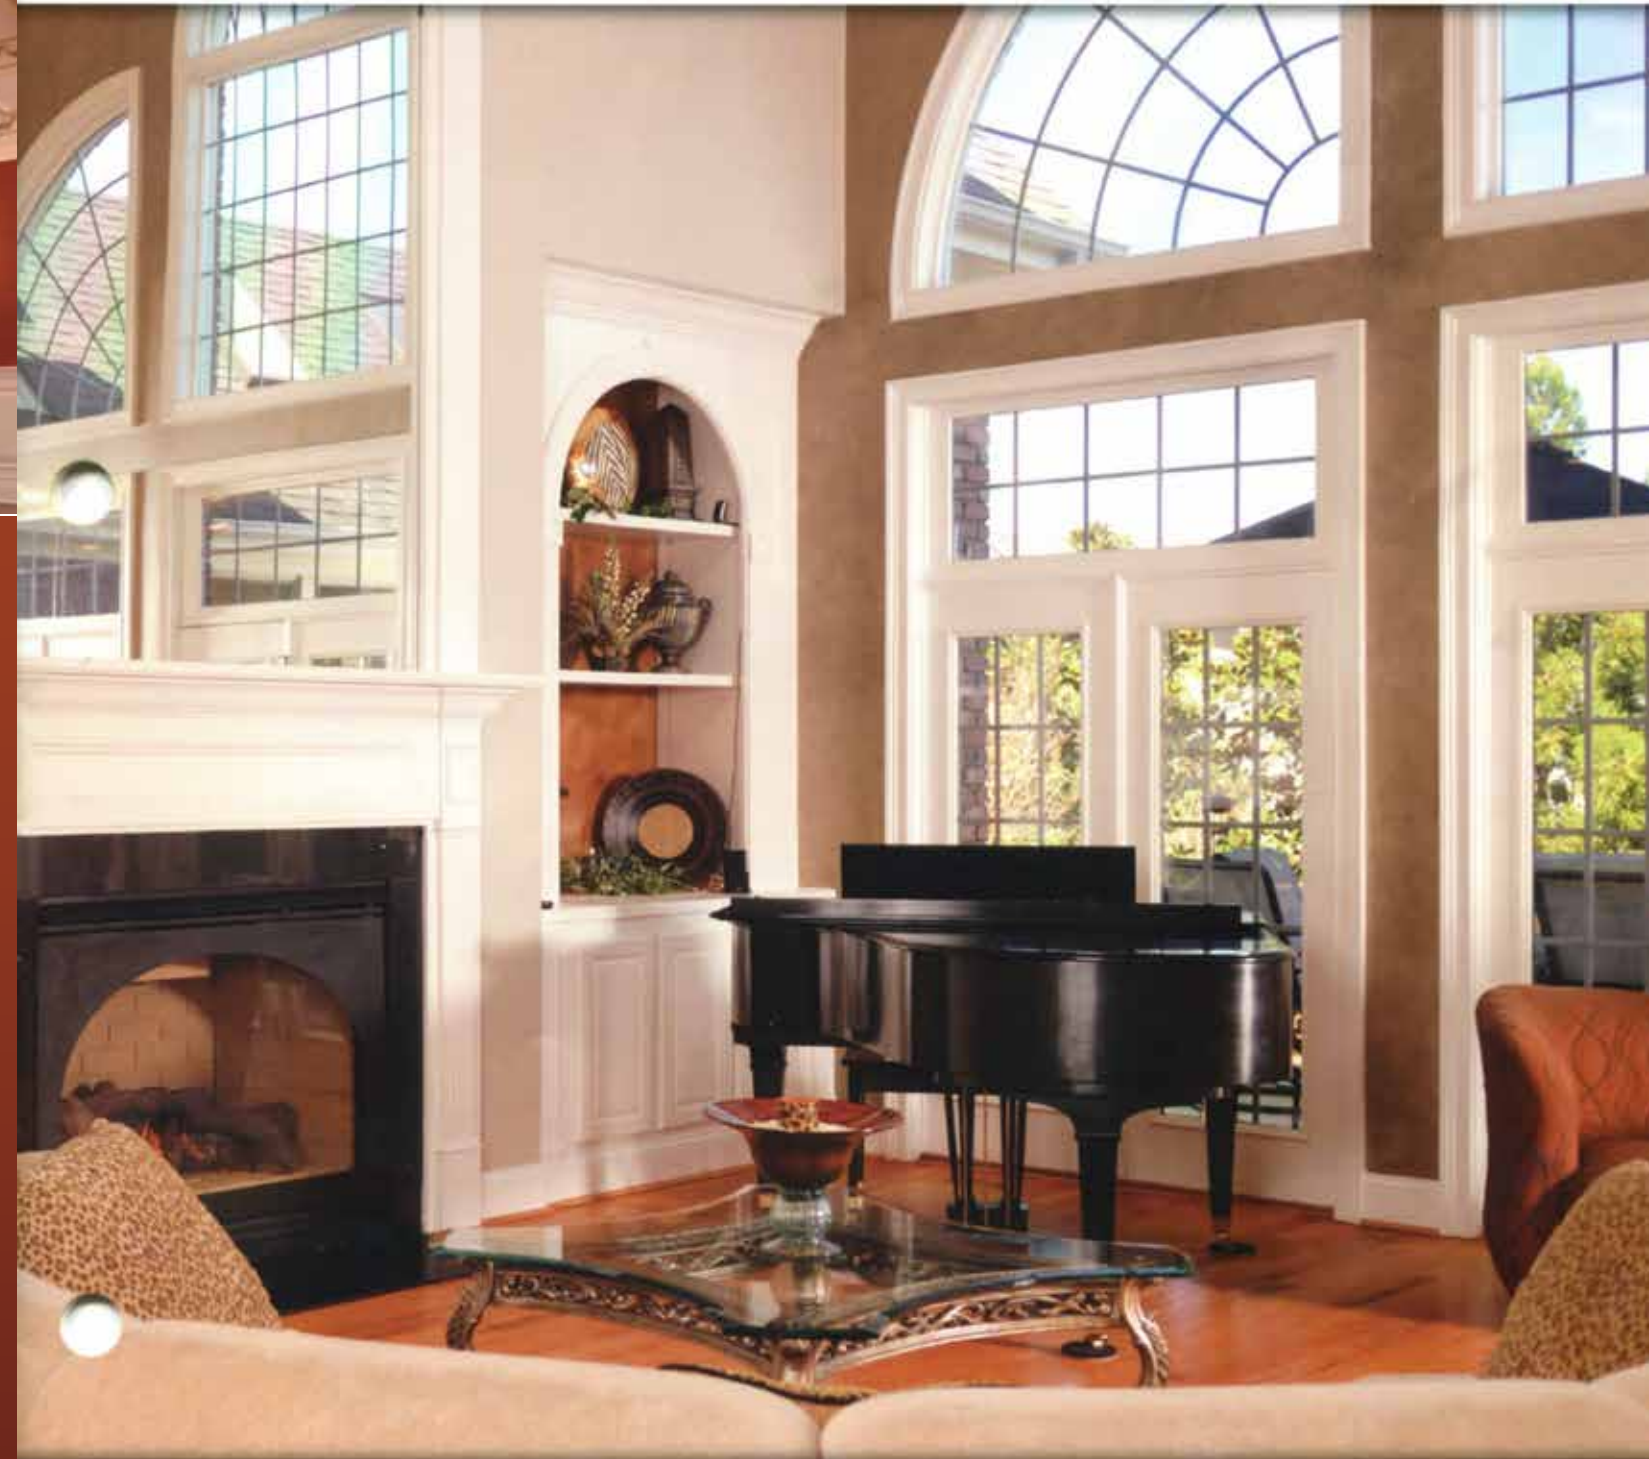

CROWNS CASINGS CHAIR RAILS BASES BOARDS

CROWNS

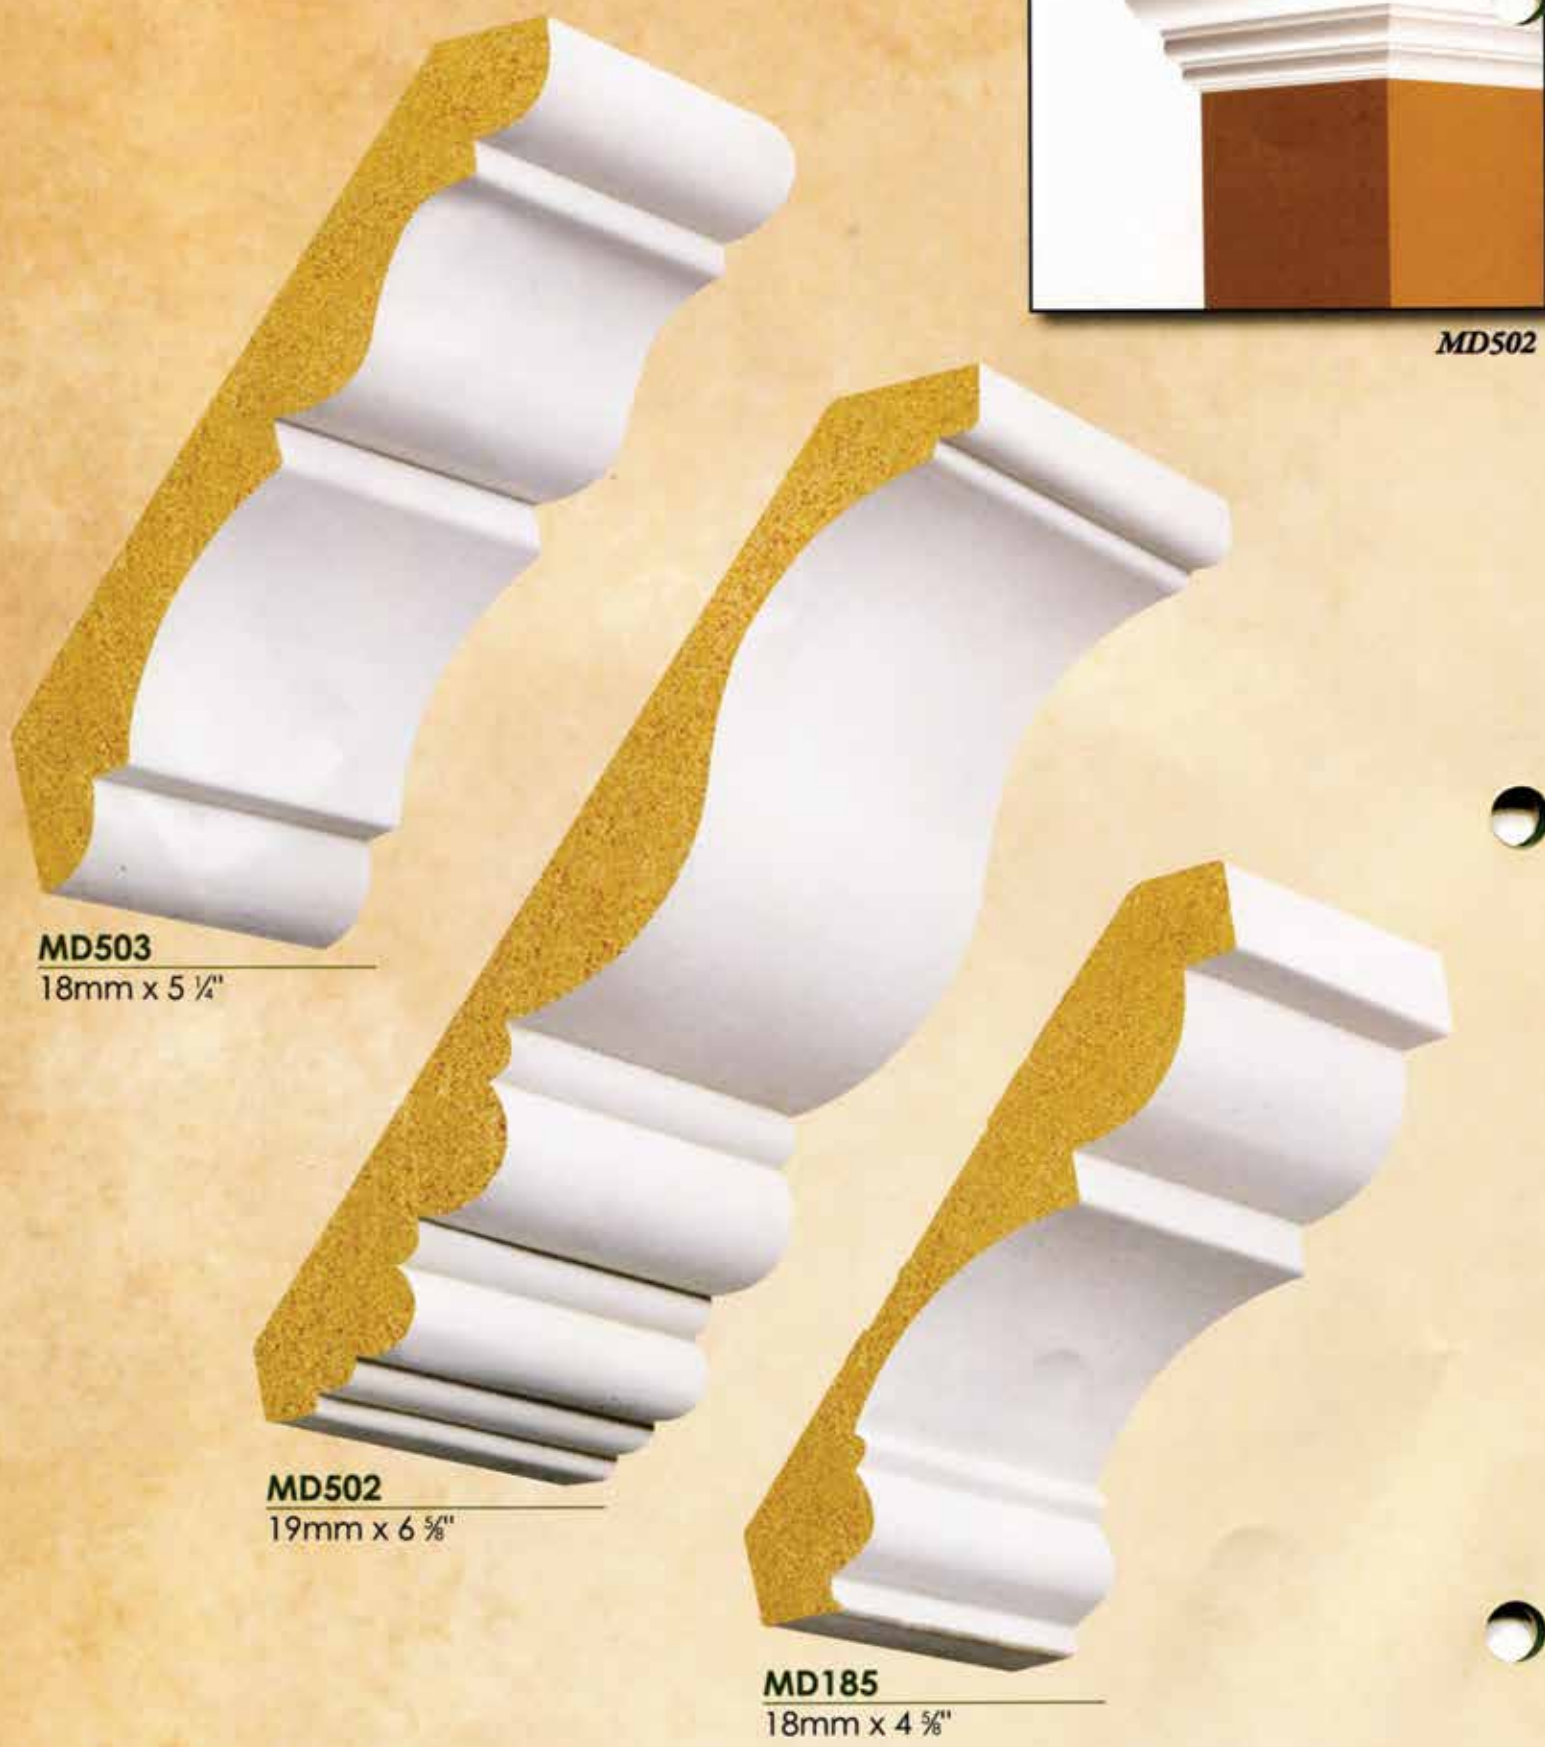

MD503
18mm x 5 1/4"

MD502
19mm x 6 5/8"

MD185
18mm x 4 5/8"

MD502

INSTALLATION & FINISHING

MDF Mouldings installation is similar to wood mouldings. For best results follow these guidelines.

- Material should be stored inside the home or job site.
- Mouldings should be stored in a dry area, not resting on concrete.
- Prior to installation, MDF mouldings should be stored in room conditions for a minimum of 48 hours.
- When installing baseboards on new slab construction, it is recommended that baseboard be installed at least 1/8" above the concrete to help prevent moisture wicking. Also, make sure all components of the wall system are dry.
- In high moisture areas, it is recommended you prime ends and backs of mouldings before installation.
- Use a 60-80 tooth carbide tipped saw blade for cutting.
- Note: MDF may expand and contract up to .3% due to change of relative humidity.
- For best results, use a pneumatic fastening system with finish nails or 18 gauge brad nails. "T" nails and staples are not recommended, as they tend to cause puckering.
- If hand nailing it is recommended to pre-drill.
- Air pressure on pneumatic nailers should be between 90-120 psi, depending on moulding type.
- Nailing should be 1" in from ends and 1/4" from edges.
- If using screws, predrilled pilot holes are recommended. Pilot holes should be 85-90% of screw root diameter and depth should be slightly more than the screws length. Sheetrock screws or specially designed MDF screws work best.
- At a splice, use 30 degree scarf joint where you can nail both sides into a stud or top/bottom plate, and glue edges with carpenter glue.

Prior to painting, nail holes should be filled with light weight spackle. Putty may also be used but make sure it is compatible with finish paint. After spackle dries, sand lightly, being careful not to sand through the primer coat.

MDF mouldings are coated with a high quality water base acrylic latex primer at the mill. Any water, oil, or lacquer base coat will work to produce a good finished product.

Not responsible for installation problems or product failure due to non conforming practices.

Thickness Legend

12mm = approx 9/16"	21mm = approx 13/16"
15mm = approx 5/8"	23mm = approx 7/8"
18mm = approx 11/16"	25mm = approx 1"
19mm = approx 3/4"	30mm = approx 1 1/8"

BASES



MDF Boards
MD14
3/4 x 3 1/2" (1 x 4)
MD16
3/4 x 5 1/2" (1 x 6)
MD18
3/4 x 7 1/4" (1 x 8)



MD019
page 7



MD455 – Base Cap
18mm x 1 3/8"



MD163
15mm x 5 1/4"



MD025
15mm x 5 1/4"



MD9233
18mm x 4 5/8"



MD623
12mm x 3 1/4"



MD520
15mm x 4"



MD506
15mm x 5"



MD518
18mm x 7 3/4"



MD145
15mm x 5 1/4"



MD520

CROWNS

BASES



MD561



MD019



MD025



MD147
15mm x 4 5/8"



MD561
25mm x 6"



MD149
15mm x 3 5/8"



MD599 - Crown Enhancer
15mm x 4 1/2"



MD385
18mm x 5 1/2"



MD157
15mm x 5 1/4"



MD5159
18mm x 5 1/4"

BASES



MD173
15mm x 7 1/4"



MD196
18mm x 7"



MD019
19mm x 6 1/2"



MD196



MD712
19mm x 4 1/2"



MD500
30mm x 6 5/8"



MD51
21mm x 5 5/8"



MD500 with MD599 enhancer

CASINGS



MD224
25mm x 4"



MD875
15mm x 3 1/2"



MD241
25mm x 3 1/2"



MD444
15mm x 3 1/2"



MDWIN
25mm x 3 1/2"



MD135
25mm x 3 1/2"

CASINGS & CHAIR RAILS



MD403
heavy chair



MD366
15mm x 2 1/4"



MD356
15mm x 2 1/4"



MD053
18mm x 3 1/2"



MD361
15mm x 2 1/2"



MD285
18mm x 3 1/4"



MD403
25mm x 3"